



USER'S MANUAL

Pick up your eMObike

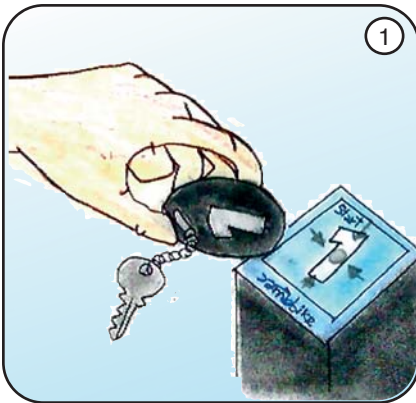

1. Pass the keychain near the pedestal with the same number and your eMObike will be unlocked,

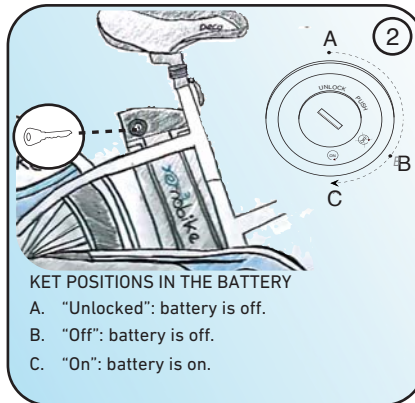


KEY POSITIONS IN THE BATTERY

- A. "Unlocked": battery is off.
- B. "Off": battery is off.
- C. "On": battery is on.


2. Insert the ignition key as you indicated in the drawing, push a little and turn to the ON position. Leave the key in this position for the duration of the journey.

- **IMPORTANT:** Remove the key when you park your ebike.

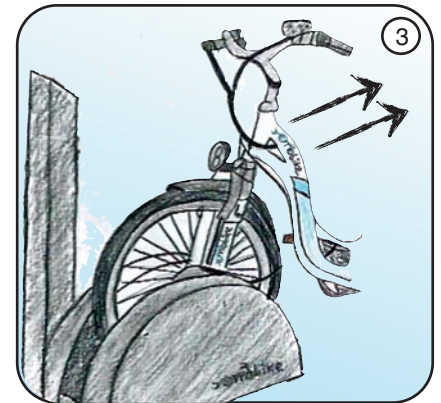


3. Now you can withdraw your eMObike of the pedestal pushing it out.

Push the button and begin your experience, pedaling at your own pace

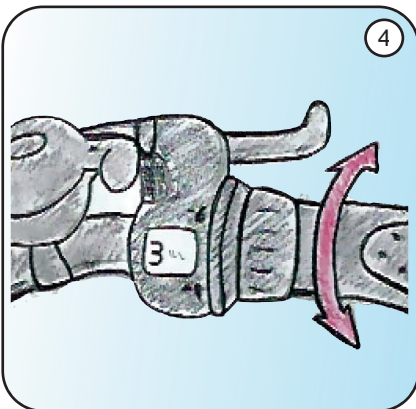

4. CHOOSE YOUR SPEED

- You can choose 3 speeds according slope of your route. Just turn the handle forward or backward as the drawing:
 1. Use this speed for slopes, minimize your effort.
 2. Recommended for mild slopes or to reduce effort.
 3. Ideal for flat or downhill stretches.

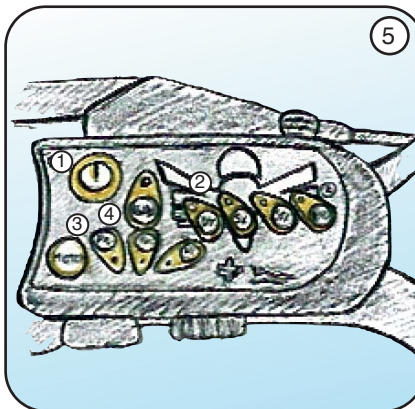


5. CONTROL YOUR EFFORT

1. Press the "ON" to turn on the controller. Wait that the checking test finalizes.
 2. Battery levels indicator.
 3. Select support levels through the MOTOR button
 4. Turn on the LED front lighting.
- **IMPORTANT:** for maintaining maximum autonomy and not running out of battery, use always you can ECO mode, reserve MED and MAX mode depending on the slopes of the route.

Circulation advices


- Use, whenever possible, bike rails in the city.
- Always follow the traffic signs.
- eMObike is a tourist vehicle and ride, not for races. Moderate your speed.
- **In case of any incidence, notify your hotel immediately.**
- If driving at night, underpasses and tunnels, is necessary to carry your lighting on.
- It is forbidden to drive and use headphones connected to audio players and mobile phone use.
- The BAC limit (0,25 mg/l) also affects cyclists, than as other drivers, are required to submit to mandatory alcohol testing.

If you want return to your hotel in the eBike, use your locks correctly

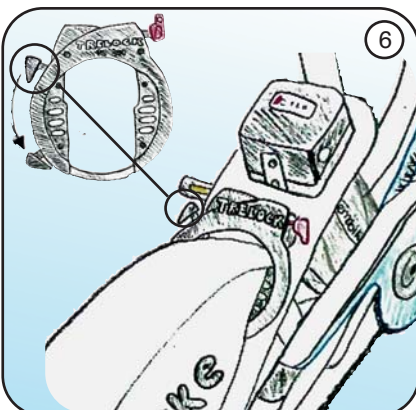

6. REAR BLOCK:


- Just enter your key and push the lever down as shown in Fig.

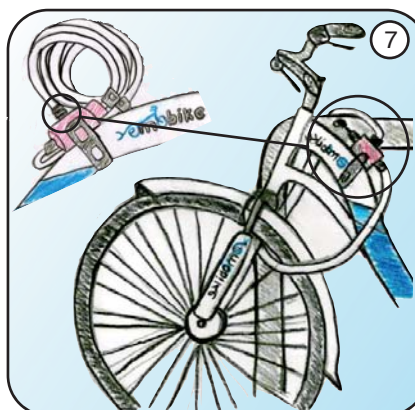

7. WIRE FRONT:

- Enter the key, unlocks the cable end and use it to fix in bicycle parkings or failing, on the ebike of your companion.
- **IMPORTANT:** make sure it is securely tied to your ebike frame, to the front wheel and to bicycle parkings.

End of the route

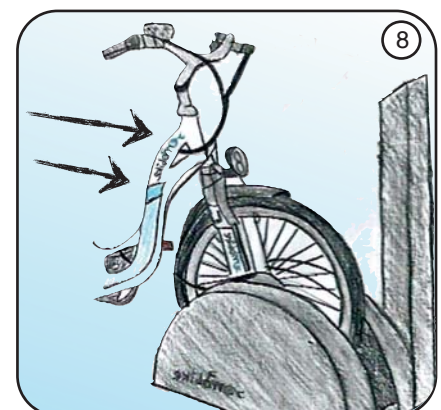

8. RETURN:

- Place your eMObike in the center of the pedestal and push it, when you reach to the end of the pedestal to be blocked it again.
- **REMEMBER** to leave your keys in the hotel reception.